

STEP

1

Choose your Front Tie Downs:

Does the truck have running boards that extend past the cab and onto the bed?

No

Yes

	YEAR	MODEL (CAB TYPE)	BED LENGTH	MFG#	MFG#
FORD	00-11	Ranger (All Cabs)	6'	F2013	-
	81-97	F150 (Square Body)	ALL	F4000 (3,4,5,6,H4)	F4000 (3,4,5,H4)
	81-97	F250 HD (Square Body)	6.5'	F4000 (3,4,5,6,H4)	F4000 (3,4,5,H4)
	81-97	F250 HD (Square Body)	8'	F2000 (3,H4)	F4000 (3,4,5,H4)
	81-97	F350 HD (Square Body)	ALL	F2000 (3,H4)	F4000 (3,4,5,H4)
	97-03	F150 / F250 LD (All Cabs)(Round Body)	8'	F2001	F4001 (4,5)
	97-03	F150 / F250 LD (All Cabs)(Round Body)	6.5'	F2002 (3,H4)	F4002 (3,4,5,H4)
	98-03	F150 (Super Crew Only)	5.5'	F2009	-
	99-07	F250 / F350 (ALL Cabs)	8'	F2011	F4006 (4,5)
	99-07	F250 / 350 (ALL Cabs)	6.75'	F2007	F4007 (4,5)
	04-08	F150 (ALL Cabs)	8'	F2003	-
	04-05	F150 (All Cabs/No Stepside Bed)	6.5'	F2004	-
	04-05	F150 (Super Crew Only)	5.5'	F2005	-
	06-07	F150 (Super Crew Only)	5.5'	F2010	-
	06-14	F150 (All Cabs, No Bed Stepside)	6.5'	F2014	-
	08-10	F250 / F350 / F450 (All Cabs)	8'	F2011	F4006 (4,5)
	08-15	F250 / F350 (All Cabs)	6.75'	F2012	-
	2008	F150 (Super Crew Only)	5.5'	F2017	-
	05-13	F450 / F550 Cab & Chassis (34" Frame Only)	N/A	F2008 (22)	-
	09-14	F150 (All Cabs)	8'	F2015	-
	09-14	F150 (Super Crew Only)	5.5'	F2017	-
	11-15	F250 / F350 / F450 (ALL Cabs)	8'	F2016	-
	14-15	F350/F450/F550 2wd (Regular Cab/Chassis) DRW	N/A	F2008 (22)	N/A
	2015	F150 (Super Cab/Extended) Super Crew	6.5'	F2018	-
CHEVROLET	07-12	CANYON/COLORADO (ExtendedCabs)	6'	C2216	-
	88-98	1500 / 2500 (All Cabs)	6.5'	C4201 (2,3,4,5,6,H4)	C4201 (2,3,4,5,H4)
	88-98	1500 / 2500/3500 (All Cabs)	8'	C2201 (3,H4)	C4201 (3,4,5,H4)
	95-00	3500 (All Cabs)	8'	C2201 (3)	C4201 (3,4,5,H4)
	99-07	1500 / 2500 Classic LD 5.5" Frame (All Cabs)	6.5" and 8'	C2202 (3,7,10,H2)	C4203 (3,4,5,H4)
	01-10	1500 / 2500 / 3500 Classic & New Body HD 8" Frame (All Cabs)	8'	C2204 (10)	C4203 (3,4,5,H4)
	01-10	1500 / 2500 / 3500 Classic & New Body HD 8" Frame (All Cabs)	6.5'	C2205 (10)	C4203 (2,3,4,5,H4)
	04-13	1500 Classic & New Body (Crew Cab Only)	5.5'	C2211	-
	07-13	1500 New Body (Standard Cab Only)	6.5'	C2208	-
	07-14	1500 New Body (Standard Cab Only)	8'	C2212	-
	07-13	1500 New Body (Extended Cab Only)	ALL	C2207	-
	11-14	2500 / 3500 HD (Crew / Ext. Cab Only)	6.5'	C2213	-
	11-14	2500 / 3500 HD (Crew / Ext. /Double Cab Only)	8'	C2214, C2219	C4204 (4,5)
	2015	2500 / 3500 HD (Crew / Ext. /Double Cab Only)	8'	C2219	C4204 (4,5)
	11-15	2500 / 3500 (Regular Cab Only)	8'	C2215	-
	14-15	1500 (Crew Cab)	5.5'	C2218	-
	14-15	1500 (All Cab)	6.5'	C2217	-
	14-15	1500 (Regular)	8'	C2212	-
	2015	2500 / 3500 HD (Crew / Double Cab Only)	6.5'	C2220	-
NISSAN	00-04	Frontier 4wd (Crew Cab 4 Door Only)	4.5'	N2407	-
	00-04	Frontier (King/Crew Only)	6'	N2408	-
	05-12	Frontier (King/Crew Only)	6'	N2409	-
	13-15	Frontier (King Only)	6'	N2409	-
	14-15	Frontier 4wd (Crew Cab 4 Door Only)	5'	-	-
	2008	Titan (King Cab 2 Door Only)	8'	N2405	-
	08-12	Titan (Crew Cab 4 Door Only)	7'	N2406	-
	04-14	Titan (King Cab 2 Door Only)	6.5'	N2402 (16)	-
	04-15	Titan (Crew Cab 4 Door Only)	5.5'	N2401	-

Footnotes

- SuperHitch Magnum 20K/30K requires the use of Tie Down R3504 or Talon Tie Down R3504A
- Drilling may be required into the Spring Hanger Bracket which is welded to the frame
- Drilling may be required for installation
- May require modifications to the running board / bed access steps brackets to install Tie Downs
- Additional labor required for installation of Tie Downs
- Front Tie down is available in adjustable Tie Down style only
- Fits Classic Body Style only
- Will also work on vehicles without a hitch receiver
- The Toyota HD Tow package attaches to the side and bottom of the vehicles frame. The Standard Toyota Tow package attaches to the bottom of the vehicles frame only
- To determine the correct fit: 1500 & 2500 model / Classic body style vehicle owners must measure the vehicle frame height at the back of the truck next to the spare tire. If the frame is 5.5" tall it requires the LD application, If the frame is 8" tall it requires the HD application
- Will work with aftermarket hitches that do not have side plates that attach to the bottom of the frame
- Tie down requires 4"x4" footprint on the side plate of the aftermarket hitch in order to install. Drilling is required for install.
- Works on vehicles without a hitch receiver
- Dually applications may require the use of (#A7004 Dually Adapter Kit) Measure from front of camper slide in point to the rear anchor point. If total is 90" or less, use Dually Adapter Kit
- Requires a Factory installed hitch receiver with an open ended cross tube

- Designed to work with the factory installed running board / bed access steps that extends past the cab and onto the bed, Tie Down is not adjustable in height.
- SuperHitch Magnum 20K/30K D1102M requires R3503/ R3503A rear tie downs
SuperHitch Magnum 20K D1101M requires R3503/R3503A Rear TD
- Toyota Tacoma's with a 5' bed & running boards / bed access steps under the cab will need to remove the running boards / bed access steps to install this tie down.
- This Tie Down is used with the SuperHitch Hero
- Will not work with aftermarket Mopar rear mounted kick out steps that are mounted under the bumper
- This SuperHitch Original 17K/20K Tie Down is also used with SuperHitch Magnum 20K/30K
- This Tie Down mounts to the cab mount, you will need to remove the running boards / bed access steps to install this tie down.
- Using older one piece SuperHitch, for rear tie down, please call 800.246.8132
- Use #C3201 for rear Tie Down when used with C1202 SuperHitch
- There are no factory hitch options available for this vehicle. Hitches installed on this truck were dealer installed aftermarket hitches. Please search for your rear tie downs under the AfterMarket column.
- Designed to be used with the OEM cross tube that comes installed on the vehicle without a hitch receiver from the factory.
- Will not work with Hidden Power due to Tie Down design.
- Works with NO running boards / bed access steps, including the ones that are just under the cab. If you have running boards / bed access steps under your cab, you will need front tie down D2127.
- Works with any factory running boards / bed access steps, including the ones that are just under the cab.
- Due to compressor location this Tie Down can't be installed with factory airbags
- H Indicates that drilling will be required. The number following designates the total number of holes drilled for installation. (example: H4=4 holes drilled)

Choose your Rear Tie Downs: If the vehicle has a rear hitch, please select which type of hitch

Factory Hitch

SuperHitch

AfterMarket

	YEAR	MODEL (CAB TYPE)	BED LENGTH	MFG#	MFG#	MFG#
FORD	00-11	Ranger (All Cabs)	6'	F3004 (15)	-	R3500 (12,H8)
	81-97	F150 (Square Body)	ALL	(25)	-	R3501 (12,H8)
	81-97	F250 HD (Square Body)	6.5'	(25)	R3503 (23)	R3501 (12,H8)
	81-97	F250 HD (Square Body)	8'	(25)	R3503 (23)	R3501 (12,H8)
	81-97	F350 HD (Square Body)	ALL	(25)	R3503 (23)	R3501 (12,H8)
	97-03	F150 / F250 LD (All Cabs)(Round Body)	ALL	F3001 (15)	-	R3500 (12,H8)
	99-04	F250 / F350 (All Cabs)	ALL	F3001 (15)	R3503 (1,23)	R3500 (12,H8)
	04-05	F150 (All Cabs)	ALL	F3003 (8)	-	R3500 (12,H8)
	05-10	F250 / F350 (All Cabs)	ALL	F3004 (15)	R3503 (1,23)	R3500 (12,H8)
	06-14	F150 (ALL Cabs)	ALL	F3005 (8)	-	R3500 (12,H8)
	05-15	F350/F450 / F550 Cab & Chassis (34" Frame Only)	N/A	-	R3503 (1,23)	R3500 (12,H8)
	09-14	F150 (All Cabs/No Bed Stepside)	5.5" and 6.5'	F3005 (8)	R3508 (19)	R3500 (12,H8)
	11-15	F250 / F350 (ALL Cabs)	ALL	F3006 (15)	R3503 (1,23)	R3500 (12,H8)
	2015	F150 (all cabs)	6.5', 5.5'	F3007 (8)	-	-
CHEVROLET	07-12	CANYON/Colorado	6'	-	-	R3500 (12,H8)
	88-94	1500 / 2500 (All Cabs)	ALL	C3201 (15)	R3503 (23)	R3500 (12,H8)
	91-94	3500	8'	C3201 (15)	R3503 (23)	R3500 (12,H8)
	95-98	1500 / 2500	ALL	C3202 (15)	R3503 (23)	R3500 (12,H8)
	95-00	3500	8'	C3202 (15)	R3503 (23)	R3500 (12,H8)
	99-13	1500 / 2500 Classic LD 5.5" Frame (All Cabs)	8'	C3204 (8)	R3503 (23)	R3500 (12,H8)
	99-07	1500 / 2500 Classic LD 5.5" Frame (All Cabs)	6.5'	C3203 (8)	-	R3500 (12,H8)
	01-07	1500 / 2500 / 3500 Classic HD 8" Frame (All Cabs)	8'	C3206 (7,8)	R3503 (1,23)	R3501 (12,H8)
	01-07	1500 / 2500 / 3500 Classic HD 8" Frame (All Cabs)	6.5'	C3205 (7,8)	R3503 (1,23)	R3501 (12,H8)
	04-07	1500 Classic (Crew Cab Only)	5.5'	C3203 (8)	-	R3500 (12,H8)
	07-10	2500 / 3500 New Body (All Cabs)	8'	C3209 (15)	R3503 (1,23)	R3501 (12,H8)
	07-10	2500 / 3500 New Body (All Cabs)	6.5'	C3209 (15)	R3502 (21)	R3501 (12,H8)
	07-13	1500 New Body (ALL CABS)	6.5' & 5.5;	C3203 (8)	R3507 (19)	R3500 (12,H8)
	07-13	1500 New Body (Standard & EXT Cab)	8'	C3204 (8)	R3507 (19)	R3500 (12,H8)
	11-14	2500 / 3500 HD All cabs	ALL	C3212 (13,21)	C3212 (21)	R3500 (12,H8)
	14-15	1500 (All cabs)	ALL	C3214	R3509 (19)	R3500 (12,H8)
	2015	2500 / 3500 HD All cabs SRW	ALL	C3215	C3216	R3500 (12,H8)
	2015	2500 / 3500 HD All cabs DRW	ALL	C3217	C3216	R3500 (12,H8)
NISSAN	00-04	Frontier (All Cabs)	All	-	-	R3500 (12,H8)
	05-14	Frontier (Crew/King Cab 2 and 4 door)	5' and 6'	N3403 (8)	-	R3500 (12,H8)
	04-14	Titan (King/Crew Cab 2 and 4 door)	All	N3401 (8)	-	R3500 (12,H8)

Footnotes

- SuperHitch Magnum 20K/30K requires the use of Tie Down R3504 or Talon Tie Down R3504A
- Drilling may be required into the Spring Hanger Bracket which is welded to the frame
- Drilling may be required for Installation
- May require modifications to the running board / bed access steps brackets to install Tie Downs
- Additional labor required for installation of Tie Downs
- Front Tie down is available in adjustable Tie Down style only
- Fits Classic Body Style only
- Will also work on vehicles without a hitch receiver
- The Toyota HD Tow package attaches to the side and bottom of the vehicles frame. The Standard Toyota Tow package attaches to the bottom of the vehicles frame only
- To determine the correct fit: 1500 & 2500 model / Classic body style vehicle owners must measure the vehicle frame height at the back of the truck next to the spare tire. If the frame is 5.5" tall it requires the LD application. If the frame is 8" tall it requires the HD application
- Will work with aftermarket hitches that do not have side plates that attach to the bottom of the frame
- Tie down requires 4"x4" footprint on the side plate of the aftermarket hitch in order to install. Drilling is required for install.
- Works on vehicles without a hitch receiver
- Dually applications may require the use of (#A7004 Dually Adapter Kit) Measure from front of camper slide in point to the rear anchor point. If total is 90" or less, use Dually Adapter Kit
- Requires a Factory installed hitch receiver with an open ended cross tube
- Designed to work with the factory installed running board / bed access steps that extends past the cab and onto the bed, Tie Down is not adjustable in height.
- SuperHitch Magnum 20K/30K D1102M requires R3503/ R3503A rear tie downs
SuperHitch Magnum 20K D1101M requires R3503/R3503A Rear TD
- Toyota Tacoma's with a 5' bed & running boards / bed access steps under the cab will need to remove the running boards / bed access steps to install this tie down.
- This Tie Down is used with the SuperHitch Hero
- Will not work with aftermarket Mopar rear mounted kick out steps that are mounted under the bumper
- This SuperHitch Original 17K/20K Tie Down is also used with SuperHitch Magnum 20K/30K
- This Tie Down mounts to the cab mount, you will need to remove the running boards / bed access steps to install this tie down.
- Using older one piece SuperHitch, for rear tie down, please call 800.246.8132
- Use #C3201 for rear Tie Down when used with C1202 SuperHitch
- There are no factory hitch options available for this vehicle. Hitches installed on this truck were dealer installed aftermarket hitches. Please search for your rear tie downs under the AfterMarket column.
- Designed to be used with the OEM cross tube that comes installed on the vehicle without a hitch receiver from the factory.
- Will not work with Hidden Power due to Tie Down design.
- Works with NO running boards / bed access steps, including the ones that are just under the cab. If you have running boards / bed access steps under your cab, you will need front tie down D2127.
- Works with any factory running boards / bed access steps, including the ones that are just under the cab.
- Due to compressor location this Tie Down can't be installed with factory airbags
- H Indicates that drilling will be required. The number following designates the total number of holes drilled for installation. (example: H4=4 holes drilled)

STEP

3

Basic
Springload
Kit

GOOD



TLI PART# S9000

BETTER

SpringloadXL



TLI PART # S9050A

BEST

FastGun

SS Polished
MFG# S9526SS Grey
MFG# S9522SS Black
MFG# S9529SS Bright White
MFG# S9530

CHOOSE YOUR TORKLIFT
TURNBUCKLES

*TURNBUCKLES SOLD SEPARATELY



TORKLIFT
INTERNATIONAL

OVER 35 YEARS OF INNOVATION, QUALITY, SAFETY.

The latest 2015 part numbers are just a click away! Visit the online automated application guide available 24/7 at TORKLIFT.COM

For fast and friendly tech support
call us at 1-800-246-8132

STEP

1

Choose your Front Tie Downs:

Does the truck have running boards that extend past the cab and onto the bed?

No

Yes

	YEAR	MODEL (CAB TYPE)	BED LENGTH	MFG#	MFG#
DODGE	97-04	Dakota (ALL Cabs)	6'	D2104	-
	2005	Dakota (Quad-Cab only)	5.5'	D2114	-
	05-10	Dakota (ALL Cabs)	6'	D2109	-
	89-93	D150 / D250 / D350 (All Cabs)	8'	F4000 (3,4,5,6,H4)	F4000 (3,4,5,H4)
	94-01	1500 (All Cabs)	6.5'	D2110	D4104 (3,4,5,H4)
	94-02	1500/2500 / 3500 (All Cabs)	8'	D2100 (3,H2)	D4100 (3,4,5)
	94-02	2500 / 3500 (All Cabs)	6.5'	D2110	D4104 (3,4,5,H4)
	02-08	1500 (All Cabs)	8'	D2107 (3, H2)	-
	02-08	1500 2wd (All Cabs except Mega)	6.5'	D2106	-
	02-08	1500 4wd (All Cabs except Mega)	6.5'	D2105	-
	03-08	2500/3500 4x2 HD (NO Mega-cab)	6.5'	D2103 (2,H2)	-
	06-08	1500 2wd (Mega-cab only)	6.5'	D2111	-
	06-08	1500 4wd (Mega-cab only)	6.5'	D2102	-
	03-09	2500 / 3500 HD (All Cabs)	8'	D2101	D4101 (4,5)
	03-09	2500 / 3500 4wd HD (All Cabs)	6.5'	D2102 (2)	D4102 (2,3,4,5)
	06-09	2500 / 3500 2wd (Mega-cab only)	6.5'	D2111	-
	07-11	3500 / 4500 / 5500 (Cab & Chassis Only)	N/A	D2112	-
	09-12	1500 4wd (Quad-cab only, NO Laramie)	6.5'	D2113	-
	10-12	2500 / 3500 (All Cabs)	8'	D2115	D4101 (4,5)
	10-12	2500 / 3500 4wd (SRW) (All Cabs)	6.5'	D2116	D4106 (4,16)
	10-12	3500 (DRW) (All Cabs)	6.5'	D2117	D4106 (4,16)
	2013	2500 (All Cabs)	8'	D2118	D4105 (4,5)
	2013	2500 (SRW) (All Cabs)	6.5'	D2119	D4106 (4,16)
	2013	3500 (DRW)(All Cabs except Mega Cab)	6.5'	D2120	D4106 (4,16)
	2013	3500 (Crew Cab)	8'	D2124	-
	2013	3500 (DRW) (Mega Cab)	6.5'	D2125	-
	2013	3500 (SRW) (All Cabs)	6.5'	D2123	D2128
	13-14	1500 4wd (Regular/Quad-cab only, NO Laramie)	6.5'	D2121	-
	2015	1500 4wd (Quad Cab, Crew Cab)	6.5'	D2121	N/A
	2015	1500 2wd (Regular Cab)	6.5'	D2121	-
	14-15	1500 2wd (Quad Cab)	6.5'	D2121	N/A
	2014	1500 2wd (Regular Cab)	8'	-	-
	2014	1500 4wd (Regular Cab)	8'	-	-
	14-15	1500 2wd (Crew Cab)	5.5'	-	-
	14-15	1500 4wd (Crew Cab)	5.5'	-	-
	2014	2500 Gas Engine (Regular Cab)	8'	D2126(28)	D2127 (29)
	14-15	2500 Crew Cab	8'	D2126 (30)	D2127 (29)
	14-15	2500 Crew Cab/Mega Cab	6.5'	D2126(28)	D2127 (29)
	2014	3500 4wd Diesel Engine (SRW)(Mega/Crew Cab)	6.5'	D2123	D2128
	14-15	3500 4wd Diesel Engine (DRW)(Mega Cab/Crew Cab)	6.5'	D2125	-
	14-15	3500 (DRW or SRW)(Crew Cab)	8'	D2124 (30)	D2127 (29)
	2015	3500 (Crew Cab) (SRW) (Diesel Engine)	6.5'	D2123	D2128
	2015	3500 (Regular Cab) (SRW & DRW) (Gas Engine Only)	8'	D2124 (30)	-
	2015	3500 (Regular Cab) (SRW & DRW) (Diesel Engine Only)	8'	D2129 (30)	-
	2015	3500 (SRW & DRW) (Crew Cab)	8'	D2124 (30)	D2127 (29)
TOYOTA	98-04	Tacoma (ALL Cabs)	6'	T2306	-
	05-14	Tacoma 4wd only All Cab	All	T2303 (18)	-
	05-14	Tacoma 2wd only All Cab	All	T2308 (18)	-
	2015	Tacoma 4wd only double cab	6.5'	T2308 (18)	-
	00-06	Tundra (Standard & HD Tow PKG All Cabs)	6.5'	T2301	-
	00-06	Tundra (Standard & HD Tow PKG All Cabs)	8'	T2302	-
	07-15	Tundra 4wd (Crew Max Only)	5.5'	T2307	-
	07-11	Tundra (All Cabs)	6.5'	T2304	-
	07-14	Tundra (All Cabs)	8'	T2305	-
	2015	Tundra (Double Cab only)	8'	T2305	-
	12-15	Tundra (Double Cab only)	6.5'	T2309	-

STEP

2

Choose your Rear Tie Downs:

If the vehicle has a rear hitch, please select which type of hitch

Factory Hitch

SuperHitch

AfterMarket

	YEAR	MODEL (CAB TYPE)	BED LENGTH	MFG#	MFG#	MFG#
DODGE	97-04	Dakota (ALL Cabs)	6'	D3105 (15)	-	R3500 (12,H8)
	2005	Dakota (Quad-Cab/Extended Cab)	5.5' and 6.5'	-	-	R3500 (12,H8)
	06-10	Dakota (ALL Cabs)	6'	D3106	-	R3500 (12,H8)
	89-93	D150 / D250 / D350 (All Cabs)	8'	-	R3503 (23)	R3501 (12,H8)
	94-01	1500 (All Cabs)	ALL	D3101 (15)	-	R3500 (12,H8)
	94-02	2500 / 3500 (All Cabs)	ALL	D3101 (15)	R3503 (23)	R3500 (12,H8)
	02-03	1500 (All Cabs)	ALL	D3103	-	R3500 (12,H8)
	04-08	1500 (All Cabs)	ALL	D3109 (8,11,14,20)	-	R3500 (12,H8)
	03-09	2500 / 3500 HD (All Cabs)	ALL	D3109 (8,11,14,20)	R3503 (14,17,20,23)	R3500 (14,12,H8)
	10-12	2500 / 3500 HD (All Cabs)	ALL	D3109 (8,11,14,20)	R3505 (14,20,21,23)	R3500 (14,12,H8)
	07-15	3500 / 4500 / 5500 (Cab & Chassis)	N/A	-	R3503 (1)	R3500 (12,H8)
	09-14	1500 (All cabs)	All	D3107 (26)	R3507 (19)	R3500 (12,H8)
	2015	1500 (Regular Cab)	8'	D3107 (15)	N/A	R3500 (12,H8)
	2015	1500 (All Cabs)	6.5'	D3107 (15)	R3507 (19)	R3500 (12,H8)
	2015	1500 (Crew Cab)	5.5'	D3107 (15)	R3507 (19)	R3500 (12,H8)
	13-14	2500/3500 (All Cabs)	ALL	D3109 (8,11,14,20)	R3507 (14,20,21)	R3500 (14,12,H8)
	2015	2500 (Crew Cab, Mega Cab)	All	D3109 (8,11,14,20)	R3507 (14,20,21)	R3500 (14,12,H8)
	2015	3500 (Crew, Mega)(Diesel Engine)	All	D3109 (8,11,14,20)	R3507 (14,20,21)	R3500 (14,12,H8)
	2015	3500 (Regular Cab)	8'	D3109 (8,11,14,20)	R3507 (14,20,21)	R3500 (14,12,H8)
TOYOTA	98-04	Tacoma (ALL Cabs)	6'	-	-	R3500 (12,H8)
	05-14	Tacoma All Cab	All	T3303	-	R3500 (12,H8)
	2015	Tacoma Double Cab	5', 6.5'	T3303	-	R3500 (12,H8)
	00-06	Tundra (Standard Tow PKG All Cabs)	ALL	T3301 (8,9)	-	R3500 (12,H8)
	00-06	Tundra (HD Tow PKG All Cabs)	8'	T3302 (9)	-	R3500 (12,H8)
	03-06	Tundra (HD Tow PKG All Cabs)	6.5'	T3302 (9)	-	R3500 (12,H8)
	2007	Tundra (All cabs)	All	T3304	-	R3500 (12,H8)
	08-13	Tundra (All cabs)	All	T3304	T3304	R3500 (12,H8)
	14-15	Tundra (All cabs)	All	T3306	T3306	R3500 (12,H8)

Footnotes

- SuperHitch Magnum 20K/30K requires the use of Tie Down R3504 or Talon Tie Down R3504A
- Drilling may be required into the Spring Hanger Bracket which is welded to the frame
- Drilling may be required for Installation
- May require modifications to the running board / bed access steps brackets to install Tie Downs
- Additional labor required for installation of Tie Downs
- Front Tie down is available in adjustable Tie Down style only
- Fits Classic Body Style only
- Will also work on vehicles without a hitch receiver
- The Toyota HD Tow package attaches to the side and bottom of the vehicles frame. The Standard Toyota Tow package attaches to the bottom of the vehicles frame only
- To determine the correct fit: 1500 & 2500 model / Classic body style vehicle owners must measure the vehicle frame height at the back of the truck next to the spare tire. If the frame is 5.5" tall it requires the LD application, If the frame is 8" tall it requires the HD application
- Will work with aftermarket hitches that do not have side plates that attach to the bottom of the frame
- Tie down requires 4"x4" footprint on the side plate of the aftermarket hitch in order to install. Drilling is required for install.
- Works on vehicles without a hitch receiver
- Dually applications may require the use of (#A7004 Dually Adapter Kit) Measure from front of camper slide in point to the rear anchor point. If total is 90" or less, use Dually Adapter Kit
- Requires a Factory installed hitch receiver with an open ended cross tube
- Designed to work with the factory installed running board / bed access steps that extends past the cab and onto the bed, Tie Down is not adjustable in height.
- SuperHitch Magnum 20K/30K D1102M requires R3503/ R3503A rear tie downs
SuperHitch Magnum 20K D1101M requires R3503/R3503A Rear TD
- Toyota Tacoma's with a 5' bed & running boards / bed access steps under the cab will need to remove the running boards / bed access steps to install this tie down.
- This Tie Down is used with the SuperHitch Hero
- Will not work with aftermarket Mopar rear mounted kick out steps that are mounted under the bumper
- This SuperHitch Original 17K/20K Tie Down is also used with SuperHitch Magnum 20K/30K
- This Tie Down mounts to the cab mount, you will need to remove the running boards / bed access steps to install this tie down.
- Using older one piece SuperHitch, for rear tie down, please call 800.246.8132
- Use #C3201 for rear Tie Down when used with C1202 SuperHitch
- There are no factory hitch options available for this vehicle. Hitches installed on this truck were dealer installed aftermarket hitches. Please search for your rear tie downs under the AfterMarket column.
- Designed to be used with the OEM cross tube that comes installed on the vehicle without a hitch receiver from the factory.
- Will not work with Hidden Power due to Tie Down design.
- Works with NO running boards / bed access steps, including the ones that are just under the cab. If you have running boards / bed access steps under your cab, you will need front tie down D2127.
- Works with any factory running boards / bed access steps, including the ones that are just under the cab.
- Due to compressor location this Tie Down can't be installed with factory airbags
- H Indicates that drilling will be required. The number following designates the total number of holes drilled for installation. (example: H4=4 holes drilled)

STEP

3

Basic
Springload
Kit

GOOD



TLI PART# S9000

BETTER

SpringloadXL



TLI PART # S9050A

BEST

FastGun



SS Polished
MFG# S9526

SS Grey
MFG# S9522

SS Black
MFG# S9529

SS Bright White
MFG# S9530

CHOOSE YOUR TORKLIFT
TURNBUCKLES

*TURNBUCKLES SOLD SEPARATELY

TORKLIFT
INTERNATIONAL

OVER 35 YEARS OF INNOVATION, QUALITY, SAFETY.

The latest 2014 part numbers are just a click away! Visit the online automated application guide available 24/7 at TORKLIFT.COM

For fast and friendly tech support call us at 1-800-246-8132

ALUMINUM TIE DOWNS

STEP

1

Choose your Front Tie Downs:

Does the truck have running boards that extend past the cab and onto the bed?

No

Yes

	YEAR	MODEL (CAB TYPE)	BED LENGTH	MFG#	MFG#
FORD	99-07	F250/F350 (All Cabs)	8'	F2011A	-
	99-07	F250/F350 (All Cabs)	6.75'	F2007A	-
	08-10	F250/F350/F450 (All Cabs)	8'	F2011A	-
	11-15	F250/F350/F450 (All Cabs)	8'	F2016A (27)	-
	06-14	F150 (All Cabs, No Bed Stepside)	6.5'	F2014A	-
	2015	F150 (SuperCab/extended) Super Crew	6.5'	F2018A	-
DODGE	03-09	2500 / 3500 HD (All Cabs)	8'	D2101A	-
	10-12	2500 / 3500 (All Cabs)	8'	D2115A	-
	2013	3500 (SRW) (All Cabs)	6.5'	D2123A	D2128A
	2014	2500 Gas Engine (Regular Cab)	8'	D2126A(28)	D2127A (29)
	14-15	2500 Crew Cab/Mega Cab	6.5'	D2126A(28)	D2127A (29)
	13-15	3500 (DRW or SRW)(Crew Cab)	8'	D2124A	D2127A (29)
	14-15	2500 Crew Cab	8'	D2126A(28)	D2127A (29)
	2014	3500 4wd Diesel Engine (SRW)(Mega/Crew Cab)	6.5'	D2123A	D2128A
	13-15	3500 4wd Diesel Engine (DRW)(Mega)	6.5'	D2125A	-
	2015	2500 (Crew Cab, Quad Cab)	6.5'	D2126A(28)	-
	2015	3500 4wd Diesel Engine (SRW) (Crew Cab)	6.5'	D2123A	D2128A
	2015	3500 Gas Engine (Regular Cab)	8'	D2124A	-
	11-15	2500 / 3500 HD (Crew / Ext. / Double Cab Only)	8'	C2214A	-
CHEVY	01-10	1500 / 2500 / 3500 Classic & New Body HD 8" Frame (All Cabs)	8'	C2204A(10)	-
	01-10	1500 / 2500 / 3500 Classic & New Body HD 8" Frame (All Cabs)	6.5'	C2205A(10)	-
	11-15	2500 / 3500 HD (Crew / Ext. Cab / Double Cab Only)	6.5'	C2220A	-

ALUMINUM TIE DOWNS

STEP

2

Choose your Rear Tie Downs:

If the vehicle has a rear hitch, please select which type of hitch


Factory Hitch

SuperHitch

	YEAR	MODEL (CAB TYPE)	BED LENGTH	MFG#	MFG#
FORD	00-11	Ranger (All Cabs)	6'	F3001A (15)	-
	81-97	F250 HD (Square Body)	6.5', 8'		R3503A (23)
	81-97	F350 HD (Square Body)	ALL		R3503A (23)
	97-03	F150 / F250 LD (All Cabs)(Round Body)	ALL	F3001A (15)	-
	99-04	F250 / F350 (All Cabs)	ALL	F3001A (15)	R3503A (1,23)
	05-10	F250 / F350 (All Cabs)	ALL	F3001A (15)	R3503A (1,23)
	05-15	F350/F450 / F550 Cab & Chassis (34" Frame Only)	N/A		R3503A (1,23)
	06-14	F150 All Cabs	ALL	F3005A	
	09-14	F150 (All Cabs/No Bed Stepside)	5.5' & 6.5'		R3508A (19)
	11-15	F250 / F350 (ALL Cabs)	ALL	F3001A (15)	R3503A (1,23)
	2015	F150 (All Cabs)	5.5' & 6.5'	F3007A	N/A
DODGE	89-93	D150 / D250 / D350 (All Cabs)	8'	-	R3503A (14,20,21,23)
	94-02	2500 / 3500 (All Cabs)	ALL	-	R3503A (14,20,21,23)
	04-08	1500/all cabs	ALL	D3109A (8,11,14,20)	-
	03-12	2500/3500 (All Cabs)	ALL	D3109A (8,11,14,20)	R3503A (14,20,21,23)
	09-14	1500 (All cabs)	ALL	-	R3507A (19)
	13-15	2500/3500 (All Cabs)	ALL	D3109A (8,11,14,20)	R3507A (14,20,21)
CHEVY	88-94	1500 / 2500 (All Cabs)	ALL	-	R3503A (23)
	91-94	3500	8'	-	R3503A (23)
	95-98	1500 / 2500	ALL	-	R3503A (23)
	95-00	3500	8'	-	R3503A (23)
	99-13	1500 / 2500 Classic LD 5.5" Frame (All Cabs)	8'	-	R3503A (23)
	01-07	1500 / 2500 / 3500 Classic HD 8" Frame (All Cabs)	6.5'	C3205A	R3503A (1,23)
	01-07	1500 / 2500 / 3500 Classic HD 8" Frame (All Cabs)	8'	C3206A	R3503A (1,23)
	07-10	2500/3500 NEW BODY (All Cabs)	ALL	C3206A	R3503A (1,23)
	07-13	1500 New Body (ALL CABS)	6.5' & 5.5;	-	R3507A (19)
	07-13	1500 New Body (Standard & EXT Cab)	8'	-	R3507A (19)
	11-14	2500 / 3500 (ALL Cabs)	ALL	C3212A (13,21)	C3212A (13,21)
	2014	1500 (All cabs)	ALL	-	R3509A (19)
	2015	2500 / 3500 (ALL Cabs) SRW	ALL	C3215A	C3216A
	2015	3500 DRW	8'	C3217A	C3216A
TOYOTA	08-15	Tundra (All cabs)	All	-	R3507A (19)
	2014	Tundra (All cabs)	All	-	R3507A (19)


New Torklift Genesis

Genesis

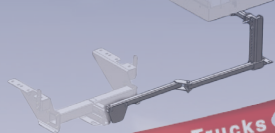

New for 1/2 Ton Trucks

SuperHitch Hero 15K

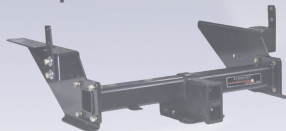

SuperHitch Original 20K



SuperHitch Magnum 30K



SuperHitch Everest 30K



SuperHitch Ballmounts

M9000



M9001



M9005



M9002



M9003



M9004



SuperTruss Extension



Genesis

YEAR	MODEL (CAB TYPE)	ITEM DESCRIPTION	TLI PART#
Any	Universal	Fits any front/rear 2" receiver - Class III or higher	A7760

YEAR	MODEL (CAB TYPE)	ITEM DESCRIPTION	MFG#
07-15	Chevrolet 1500	All	C1210H (1a)
09-14	Ford F150	All bed lengths with factory hitch	F1005H (1,1a,2)
09-14	Dodge 1500	5.5' and 6.5' bed only	D1106H (1a)
2015	Dodge 1500	6.5' bed only	D1106H (1a)
08-15	Toyota Tundra Crew Max	All bed lengths with factory hitch	T1300H (1a,2,3,7)

Footnotes:
1 It is not compatible with factory hitch rated to 11,500 Lbs
2 Comes with a single receiver that combines with factory hitch
3 In some rare cases, due to the manufacturing tolerances of the factory toyota hitch, there will not be enough clearance for the T1300H Super Hitch Hero. To provide the clearance needed, it may be necessary to lightly grind the lower portion of the factory receiver strap.

YEAR	MODEL (CAB TYPE)	ITEM DESCRIPTION	MFG#
FORD			
80-97	F250/F350	All bed lengths	F1000 (1b)
99-15	F250/F350/F450 Factory Bed	All bed lengths	F1002 (1b,5)
00-15	F350/F450/F550 cab and chassis	NA	F1003 (1b,5)
99-05	Excursion	NA	F1006 (1b)
DODGE			
80-93	250/350	long	F1000 (1b,1)
94-02	2500/3500	long	D1100 (1b,1)
94-02	2500/3500	short	D1100 (1b,1)
03-12	2500 HD/3500HD	long and short without factory hitch	D1101 (1b,2)
03-12	2500 HD/3500 HD	longbed and short with factory hitch installed	D1102 (1b,2,3)
2013	2500HD/3500 HD	longbed and short with factory hitch	D1104 (1b,2,3)
14-15	2500	long and short	D1107 (1b,2,3)
2014	3500 HD	long and short with factory hitch	D1104 (1b,2,3)
2015	3500 HD	long bed and short bed W/ factory hitch	D1104 (1b,2,3)
CHEVY / GMC			
82-87	2500	Long bed	C1200 (1b,2)
82-90	3500	Long bed	C1200 (1b,2)
88-98	2500	All bed lengths	C1201 (1b,1)
91-00	3500	All bed lengths	C1201 (1b)
99-00	2500 LD	Long bed	C1202 (1b)
01-07	2500 HD/3500 HD classic	Short bed	C1204 (1b,4)
01-10	2500 HD/3500 HD classic & new body	Long bed	C1205 (1b)
07-10	2500 HD/3500 HD/new body	Short bed	C1206 (1b)
11-14	2500/3500	Long bed	C1208 (1b)
11-14	2500/3500	Short bed	C1209 (1b,1,6)
2015	2500/3500 HD	Long bed	C1211 (1b)
2015	2500/3500 HD	Short bed	C1212 (1b)


YEAR	MODEL (CAB TYPE)	ITEM DESCRIPTION	MFG#
FORD			
99-15	F250/F350/F450 Factory Bed	All bed lengths	F1002-30 (1c,5)
00-15	F350/F450/F550 cab and chassis	NA	F1003-30 (1c,5)
DODGE			
03-12	2500 HD/3500 HD	Long and short bed with factory hitch	D1102-30 (1c,2,3)
07-15	STERLING / 3500 /4500 / 5500 HD CAB & CHASSIS/ QUAD CAB & REG		D1103-30 (1c,2,3)
2013	2500HD/3500 HD	Long and short bed with factory hitch	D1104-30 (1c,2,3)
14-15	2500	Long and short bed with factory hitch	D1107-30(1c,2,3)
2014	3500 HD	Long and short bed with factory hitch	D1104-30 (1c,2,3)
2015	3500 HD	Long bed with factory hitch	D1104-30 (1c,2,3)
CHEVY/GMC			
01-07	2500 HD/3500 HD classic	Short bed	C1204-30 (1c,4)
01-10	2500 HD/3500 HD classic & new body	Long bed	C1205-30 (1c)
2007	KODIAK CAB & CHASSIS	Long bed	C1207-30 (1c)
07-10	2500 HD/3500 HD/ new body	Short bed	C1206-30 (1c)
11-14	2500/3500	Long bed	C1208-30 (1c)
11-14	2500/3500	Short bed	C1209-30 (1c,1,6)
2015	2500/3500 HD	Long bed	C1211-30 (1c)
2015	2500/3500 HD	Short bed	C1212-30 (1c)

*SuperTruss capacities when used with a SuperHitch Hero are reduced.
1a Rated at 1,500 lbs tongue weight capacity and 15,000 lbs weight distributing capacity
1b Rated at 2,000 lbs tongue weight capacity and 20,000 lbs weight distributing capacity
1c Rated at 3,000 lbs tongue weight capacity and 30,000 lbs weight distributing capacity
2 Spare tire hanger and tailpipe modification may be necessary
3 May require modification to spare tire hanger
3 Will only work with factory welded on receiver hitch

4 Fits only classic body style
5 Trucks with 34 1/2" cab and chassis frame use F1003; trucks with a 37 1/2" regular pickup frame use a F1002
6 Works with vehicles that have factory rims and tires 18" and smaller
7 T1300H cannot be installed on trucks with suspension airbags. Torklift recommends StableLoads as an alternative

New Torklift Genesis

Genesis

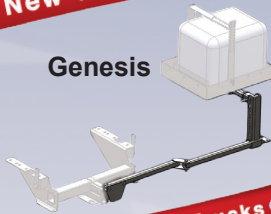

New for 1/2 Ton Trucks

SuperHitch Hero 15K



SuperHitch Original 20K



SuperHitch Magnum 30K



SuperHitch Everest 30K



SuperHitch Ballmounts

M9000



M9001



M9005



M9002



M9003



M9004



SuperTruss Extension



SuperHitch Everest Weight Distribution System

ITEM DESCRIPTION	TLI PART#
Magnum Shank 30K for Everest only: Special 1" holes	M9010
Magnum Shank XL 30K for Everest only: Special 1" holes	M9011
Industry's highest rated weight distribution system with 3,000lbs tongue weight and 30,000lbs towing capacity	WD1000
Friction plate replacement kit: prevents friction between yoke and ball mount.	WP1001
Separate set of hook up clips for hydraulic assist.	WP1002
Separate set of cam over leverage arms for engaging hook up clips	WP1003

SuperHitch Pintle/Ballmount Accessories

ITEM DESCRIPTION	MAX CAPACITY	TLI PART#
Magnum Drop Shank	30,000 lbs.	M9000
Magnum Drop Shank XL	20,000 lbs.	M9001
Magnum Ballmount Adapter	20,000 lbs.	M9005
Magnum Pintle Adapter	20,000 lbs.	M9002
Magnum Pintle Shank	20,000 lbs.	M9003
Magnum Ballmount Adapter	20,000 lbs.	M9004
Magnum 2.5" To 2" Adapter Sleeve	N/A	M9006
Magnum 30k Trailer Ball	30,000 lbs.	M9008

SuperHitch SuperTruss Receiver Extension

LENGTH	DEAD WEIGHT	HERO 15K	WEIGHT DISTRIBUTING	HERO 15K	TLI PART#
21"	750 / 7,500	350 / 3,500*	1,400 / 14,000	500 / 5,000*	E1521
24"	750 / 7,500	300 / 3,000*	1,400 / 14,000	400 / 4,000*	E1524
28"	750 / 7,500	300 / 3,000*	1,200 / 12,000	400 / 4,000*	E1528
32"	650 / 6,500	300 / 3,000*	1,200 / 12,000	400 / 4,000*	E1532
36"	650 / 6,500	200 / 2,000*	1,200 / 12,000	350 / 3,500*	E1536
42"	600 / 6,000	200 / 2,000*	1,200 / 12,000	350 / 3,500*	E1542
48"	600 / 6,000	200 / 2,000*	1,200 / 12,000	350 / 3,500*	E1548
60"	500 / 5,000	100 / 1,000*	1,000 / 10,000	200 / 2,000*	E1560
SuperTruss Extension SkidWheel					A7100

Wire Harnesses

PRODUCT DESCRIPTION	ACTUAL LENGTH	TYPE	TLI PART#
7-pin wiring pigtail for 21" extension	24"	A	W6021
7-pin wiring pigtail for 24" extension	28"	A	W6024
7-pin wiring pigtail for 28" extension	32"	A	W6028
7-pin wiring pigtail for 32" extension	38"	A	W6032
7-pin wiring pigtail for 36" extension	42"	A	W6036
7-pin wiring pigtail for 42" extension	48"	A	W6042
7-pin wiring pigtail for 48" extension	57"	A	W6048
7-pin wiring pigtail for 60" extension	68"	A	W6060
7-pin universal fit Truck-to-camper wiring harness	120"	A	W6510
7-pin wiring pigtail for camper and trailer Fits 21"-28" extension	120"	B	W6524
7-pin wiring pigtail for camper and trailer Fits 32"-36" extension	120"	B	W6532
7-pin wiring pigtail for camper and trailer Fits 42"-48" extension	120"	B	W6548

*SuperTruss capacities when used with a SuperHitch Hero are reduced. Call us at 1-800-246-8132 for details.



**Quick Disconnect Model
Shown Above**

YEAR	MAKE/MODEL	MFG#	MFG#
UNIVERSAL			
Universal	Truck/SUV/Van/RV/Commercial, etc	A7311 (2,4)	A7202 (3)
FORD			
All	Ranger	A7311 (2,4)	
81-09	F150/F250/F350/F450	A7311 (2,4)	A7200 (3)
10-14	F150	A7310 (1,4)	
10-15	F250/F350/F450	A7310 (1,4)	A7200 (3)
00-15	F350/F450/F550		A7200 (3)
01-08	E150 Van	A7311 (2,4)	
05-11	E250/E350 Van	A7311 (2,4,5)	
12-13	E250/E350 Van	A7310 (1,4,5)	
DODGE			
All	Sprinter Vans	A7311 (2,4)	-
95-08	1500	A7311 (2,4)	-
95-13	2500/3500/4500	A7311 (2,4)	A7200 (3)
14-15	3500/4500	A7311 (2,4)	A7200 (3)
14-15	4500/5500 Cab and Chassis	-	A7200 (3)
All	Dakota	A7311 (2,4)	-
CHEVROLET/GMC			
00-13	2500 Suburban/YukonXL	A7310 (1,4)	-
All	Canyon/Colorado/s10/Sonoma	A7311 (2,4)	-
88-14	1500 trucks	A7310 (1,4)	-
2015	1500 trucks	A7310 (1,4,7)	
88-10	3500 trucks	A7310 (1,4,5)	
11-14	3500 trucks	A7310 (1,4,5)	A7202 (3)
2015	3500 trucks	N/A	A7202 (3)
88-15	2500 trucks	A7310 (1,4)	-
All	Express/Savana 2500/3500	A7310 (1,4,5)	
TOYOTA			
All	Tacoma	A7311 (2,4)	-
All	Tundra	A7311 (2,4)	-
NISSAN			
All	Frontier	A7311 (2,4)	-
All	Xterras	A7311 (2,4)	-
All	Titan	A7311 (2,4,6)	-
All	NV 2500/3500	A7311 (2,4)	-
HUMMER			
All	H3 SUVs	A7311 (2,4)	-
MERCEDES			

Footnotes

(1) A7310 StableLoad is a NO DRILL APPLICATION and requires factory pre-drilled 1/2" diameter holes in lower overload spring. The A7310 Quick Disconnect StableLoad is designed for vehicles that have a lower overload leaf suspension with a hole near each end of the lower overload spring. The lower overload will for the most part be shorter, thicker and will generally have separation from the rest of the spring pack. In most cases, there will be a plastic disk covering the hole in question.

(2) A7311 (WITH DRILL KIT) will fit any passenger or commercial vehicle, Van, SUV, Truck, RV etc. with rear leaf springs and lower overload spring. The lower overload leaf can be identified by being on the very bottom of the spring pack, being thicker than the rest of the leaf springs in the spring pack and generally speaking having a gap between the lower overload leaf spring and the upper leaf spring pack.

-Drilling four 7/16 holes required. Specially treated drill bits and detailed drilling instructions are included.

-Average drill time is 30-40 minutes for complete installation

-Many factory overload springs come pre-drilled with 1/2" holes.

Therefore, drilling holes in the overload springs in the same factory locations found on vehicles with pre-drilled holes will have no effect on your springs integrity or operation. The drilled springs (when drilled in accordance with the Torklift International drilling specifications) and the integrity of the springs once drilled are covered under the Torklift International Legendary Lifetime Warranty.

(3) The A7200 is a NO DRILL APPLICATION (drilling of rubber pad on some older Dodge applications may be required) and must have factory installed upper overload.

-Will not work in conjunction with SuperSprings

-Due to factory overload engagement design, some applications have progressive engagement, where rear springs will contact first.

-Drilling of rubber pad on some older Dodge applications may be required. Depending on the vehicle model, suspension package and condition, actual distance between the StableLoad and vehicle frame overload contact bracket may vary. In some rare instances, when the vehicle is not carrying a load the StableLoad may come into contact on occasion due to rough road conditions and other anomalies.

(4) On Quick Disconnect StableLoad (Part#s A7310/A7311) due to wear and tear after time, some vehicles leaf springs may have minimal clearance with the lower overload for StableLoad engagement / disengagement when the vehicle is unloaded. In order for the vehicle's StableLoad to engage and disengage with minimal effort, a minimum gap of 1/8" is required between the lower overload and the spring pack.

(5) There is no fit for the 3500/E350 Cab and Chassis.

(6) If your Nissan Titan has an Axle wrap bracket located at the rear of the lower leaf spring A7310/A7311 StableLoads will only be installed on the front of the driver and passenger leaf springs.

(7) Due to clearance issues, the StableLoad will only work on the rear of the spring.



The latest **2015** part numbers are just a click away! Visit the online automated application guide available **24/7** at **TORKLIFT.COM**

For fast and friendly tech support call us at **1-800-246-8132**

HiddenPower - Under Vehicle Battery Mount



Actual product may vary

YEAR	PRODUCT DESCRIPTION	MFG PART#	Group 24-31 Box Included
FORD			
73-07	F250 / F350 long bed	A7703 (1,2)	NO
73-07	F250 / F350 long bed	A7727 (2)	X
08-14	F250 / F350 / F450 long bed	A7728 (2)	X
05-14	E250/E350 VAN	A7729 (2)	X
All	E450 based RVs	A7740 (2)	X
2010-2014	F150 Crew Cab. Extended Cab	A7726	X
CHEVY/GMC			
01-10	2500/3500 Extended & Crew Cab - Long Bed	A7730 (2)	X
01-10	2500/3500 Crew Cab - Short Bed	A7730 (2)	X
11-14	2500/3500 - Extended & Crew Cab - Long Bed	A7732 (2)	X
2015	3500 Crew Cab	A7732 (2)	X
DODGE			
94-02	D1500/2500/3500 Quad Cab - Long Bed	A7742 (2)	X
03-09	2500/3500 Quad Cab - Long Bed	A7740 (2)	X
06-12	2500/3500 Mega Cab - Short & Long Bed	A7740 (2)	X
09-12	2500/3500 Crew Cab - Long Bed	A7740 (2)	X
13-15	2500 Crew Cab - Long Bed	A7740 (2)	X
14-15	3500 Crew Cab - Long Bed	A7740 (2)	X
Footnotes:			
1. Battery box not included			

ExtendedPower - Receiver Extension Battery Mount

PRODUCT DESCRIPTION	MFG PART#
Extended Power for SuperTruss Dual Extension (comes with single Group 24 battery box and bracket)	A7736 (1)
Extended Power for Aftermarket Single Extension (comes with single Group 24 battery box and bracket)	A7735
Footnotes:	
1. Works with 36" - 60" SuperTruss Extensions (SuperHitch F1005H- Requires minimum 48" SuperTruss Extension). Minimum length requirements due to interference with lateral support safety chains.	

PowerArmor - The Locking / Storage Battery Box

PRODUCT DESCRIPTION	OUTSIDE DIMENSIONS	MFG PART#
PowerArmor DH (6 volt and 12 volt) bright tread diamond plate and black hammertone powder coat	26-3/4"L x 8-3/16"W x 13"H	A7708R
SolarPowerArmor DH (6 volt and 12 volt) bright tread diamond plate and black hammertone powder coat	26-3/4"L x 8-3/16"W x 14-1/4"H	A7708RS
PowerArmor MAX DH (6 volt and 12 volt) bright tread diamond plate and silver vein powder coat	58.5"L x 8-3/16"W x 13"H	A7710R
SolarPowerArmor MAX DH (6 volt and 12 volt) bright tread diamond plate and silver vein powder coat	58.5"L x 8-3/16"W x 14-1/4"H	A7710RS
PowerArmor DH (6 volt and 12 volt) bright tread diamond plate and black hammertone powder coat	23-7/8"L x 8-3/16"W x 13"H	A7712R
SolarPowerArmor DH (6 volt and 12 volt) bright tread diamond plate and black hammertone powder coat	23-7/8"L x 8-3/16"W x 14-1/4"H	A7712RS
Solar Panel Kit-Additional 10 watt solar panel to add to a PowerArmor Solar or to retrofit a regular PowerArmor	N/A	A7713
Y-Harness Adapter-Solar Harness Adapter Kit to be used with PowerArmor Solar when using two solar panels and four batteries or more. (PowerArmor Max only)	N/A	A7714
6AMP Regulator- When running less than two batteries per solar panel, this regulator is required. It prevents the battery from being overcharged. (For full PowerArmor line)	N/A	A7715
Replacement Battery Mat for 26.5" PowerArmor- Absorbs and neutralizes battery acid, preventing corrosion to the batteries and the PowerArmor	N/A	A7716
Replacement Battery Mat for 58.5" PowerArmor- Absorbs and neutralizes battery acid, preventing corrosion to the batteries and the PowerArmor	N/A	A7717
Replacement Battery Mat for 24" PowerArmor- Absorbs and neutralizes battery acid, preventing corrosion to the batteries and the PowerArmor	N/A	A7718

Lock and Load

PRODUCT DESCRIPTION	TLI PART#
Lock and Load cargo tray: 27" x 23" Security strap adjustments (8.5" x 13" x 13") to (28" x 21" x 23")	A7750
Lock and Load Additional Straps	A7751



The latest **2015** part numbers are just a click away! Visit the online automated application guide available **24/7** at **TORKLIFT.COM**

For fast and friendly tech support call us at **1-800-246-8132**

GlowStep Series - The Ultimate Scissor Step

6" Deep GlowSteps with 6"x20" Step Dimensions

GLOWSTEP	MOUNTING BRACKET HEIGHT	COLLAPSED HEIGHT	MAX WEIGHT	GLOWSTEP#	GLOW-GUIDE#	SAFE STEP#	DIRT DESTROYER#	BASEMENT STEP#	BASEMENT STEP#	GLOWSTEP LOCK#
Add A Step	N/A	N/A	N/A	A7501	A7620(^)	A7602	A7603	A7510(>)	A7513(>>)	A7509
2 Step(**)	19.5"	6" - 7"	350lbs(†)	A7502	A7620(^)	A7602	A7603	A7510(>)	A7513(>>)	A7509
3 Step(**)	27"	8" - 9"	350lbs(†)	A7503	A7620(^)	A7602	A7603	A7510(>)	A7513(>>)	A7509
4 Step(**)	34.5"	10" - 11"	350lbs(†)	A7504	A7620(^)	A7602(**)	A7603	A7510(>)	A7513(>>)	A7509
5 Step(**)	42"	12" - 13"	300lbs(†)	A7505	A7620(^)	A7602(**)	A7603	A7510(>)	A7513(>>)	A7509
6 Step(**)	49.5"	14" - 15"	300lbs(†)	A7506	A7620(^)	A7602(**)	A7603	A7510(>)	A7513(>>)	A7509

6" Deep GlowSteps with 6"x20" Step Dimensions

GLOWSTEP	MOUNTING BRACKET HEIGHT	COLLAPSED HEIGHT	MAX WEIGHT	GLOWSTEP#	GLOW-GUIDE#	SAFE STEP#	DIRT DESTROYER#	BASEMENT STEP#	BASEMENT STEP#	GLOWSTEP LOCK#
Add A Step	N/A	N/A	N/A	A7801	A7620(^)	A7602	A7603	A7510(>)	A7513(>>)	A7509
2 Step(**)	19.5"	6" - 7"	375lbs(††)	A7802	A7620(^)	A7602	A7603	A7510(>)	A7513(>>)	A7509
3 Step(**)	27"	8" - 9"	375lbs(††)	A7803	A7620(^)	A7602	A7603	A7510(>)	A7513(>>)	A7509
4 Step(**)	34.5"	10" - 11"	375lbs(††)	A7804	A7620(^)	A7602(**)	A7603	A7510(>)	A7513(>>)	A7509
5 Step(**)	42"	12" - 13"	325lbs(††)	A7805	A7620(^)	A7602(**)	A7603	A7510(>)	A7513(>>)	A7509
6 Step(**)	49.5"	14" - 15"	325lbs(††)	A7806	A7620(^)	A7602(**)	A7603	A7510(>)	A7513(>>)	A7509

GlowStep Revolution with 8" X 22.25" Step Dimensions - Includes All Terrain Landing Gear

PART NUMBER	DESCRIPTION	WIDTH BETWEEN FACTORY MOUNTING BRACKETS	HEIGHT FROM TOP OF STEP OPENING TO THE GROUND	HEIGHT FROM TOP OF STEP OPENING TO BOTTOM OF STORED STEPS	WEIGHT CAPACITY	GLOWGUIDE	SAFE STEP	DIRT DESTROYER	GLOWSTEP LOCK	All Terrain Landing Gear
A8002	2 Step GlowStep Revolution	27.5"	16-13/16" to 22-1/2"	11-1/16" to 13-13/16"	375lbs	A7620(^)(!!)	A7602	A7603	N/A	Included
A8003	3 Step GlowStep Revolution	27.5"	23-5/8" to 30-1/4"	13-5/16" to 16-1/16"	375lbs	A7620(^)(!!)	A7602	A7603	N/A	Included
A8004	4 Step GlowStep Revolution	27.5"	30-7/16" to 38"	15-13/16" to 18-9/16"	375lbs	A7620(^)(!!)	A7602	A7603	N/A	Included
A8005	5 Step GlowStep Revolution	27.5"	37-1/4" to 45-3/4"	18-5/16" to 21-1/16"	325lbs	A7620(^)(!!)	A7602(**)	A7603	N/A	Included
A8006	6 Step GlowStep Revolution	27.5"	44" to 53-1/2"	20-13/16" to 23-9/16"	325lbs	A7620(^)(!!)	A7602(**)	A7603	N/A	Included

(†) With use of Torklift GlowGuide. Otherwise 2-4step MAX CAP 325lbs / 5-6 MAX CAP 275lbs

(††) With use of Torklift GlowGuide. Otherwise 2-4step MAX CAP 350lbs / 5-6 MAX CAP 300lbs

(^*) Used for Scissor Steps on truck campers and with RV Motorhome Steps

(**) Additional Kit will be required to complete installation.

(**) Each 2 - 6 GlowStep Kit includes 1 Universal Surface Mounting Bracket

(>) White powder Coat finish

(>>) Aluminum finish, (Raw, No power coating)

Fortress GasLock - Propane Tank Security

PRODUCT DESCRIPTION	TLI PART#
Fortress Gas Lock - 3/8" - coarse thread	A7701
Fortress Gas Lock - 1/2" - coarse thread	A7702
(AirStream)Fortress Gas Lock - 1/2" - coarse thread	A7770
(AirStream)Fortress Gas Lock - 3/8" - coarse thread	A7771
Fortress PowerLock - White	A7773
Fortress PowerLock - Black	A7774

Truck Camper Storage/Stability

PRODUCT DESCRIPTION	TLI PART#
Camper Packer - lumber included	A7012
Camper Packer - lumber not included	A7010
Square Bracket FastGun Wobble Stopper	A7016
Round Bracket FastGun Wobble Stopper	A7006

Accessories

PRODUCT DESCRIPTION	TLI PART#	
BATTERY BOX LOCK	S9501	
RUBBER CAMPER BUMPER - KIT INCLUDES TWO TRUCK CAMPER RUBBER BULK HEAD BUMPSTOPS	A7001	
ANCHOR RELOCATION KIT - UNIVERSAL CAMPER ANCHOR RELOCATION KIT. FITS ALL CAMPERS	A7004	
TIE DOWN FINISHING KIT - SET OF 4 VINYL CAP COVERS - 4 PROTECTIVE FOAM INSERTS - DESIGNED FOR USE WITH TORKLIFT TIE DOWNS	A7009	
STABLELOAD POP DISPLAY - STABLELOAD POINT OF PURCHASE DISPLAY	G1100	
FASTGUN POP DISPLAY - FASTGUN POINT OF PURCHASE DISPLAY	G1200	
HIDDEN POWER UNIVERSAL SPLICE WIRING HARNESS (FITS ALL HIDDEN POWER APPLICATIONS)	W7703	

Turnbuckles

PRODUCT DESCRIPTION	TLI PART#	
SPRING LOAD XL KIT- SPRING LOADED TURNBUCKLE FOR FRAME MOUNTED TIEDOWN- STAINLESS STEEL	SET OF 2	S9050A
BASIC SPRING LOAD KIT - SPRING LOADED UNITS W/2 HEAVY DUTY TURNBUCKLES	SET OF 2	S9000
FASTGUN TURNBUCKLES- USE W/FRONT BED MOUNTED TIEDOWNS- STAINLESS- GRAY	SET OF 2	S9520
FASTGUN TURNBUCKLES- USE W/FRONT BED MOUNTED TIEDOWNS- STAINLESS- POLISHED	SET OF 2	S9527
FASTGUN TURNBUCKLES- USE W/BUMPER OR FRAME MOUNT TIEDOWN- STAINLESS- GRAY	SET OF 2	S9522
FASTGUN TURNBUCKLES- USE W/BUMPER OR FRAME MOUNT TIEDOWN- STAINLESS- POLISHED	SET OF 2	S9526
FASTGUN TURNBUCKLES- USE W/BUMPER OR FRAME MOUNT TIEDOWN- STAINLESS- BLACK	SET OF 2	S9529
FASTGUN TURNBUCKLES - USE WITH REAR BUMPER OR FRAME MOUNTED TIEDOWNS - BRIGHT WHITE	SET OF 2	S9530
FASTGUN TURNBUCKLES - USE WITH REAR BUMPER OR FRAME MOUNTED TIEDOWNS - BRIGHT WHITE	SET OF 2	S9521
DERRINGER HANDLE- DERRINGER QUICK DISCONNECT HANDLES- ALUMINUM- BLACK	SET OF 4	S9528
ANCHORGUARDS- INCLUDES 2 SPRING LOADED SS TURNBUCKLES & 2 CUSHIONED SS TURNBUCKLES	SET OF 4	S9013
DERRINGER ANCHORGUARDS- ANCHORGUARDS W/BLACK POWDER COATED DERRINGER HANDLES	SET OF 4	S9020
HOOK TO HOOK TURNBUCKLES- HEAVY DUTY FORGED- INCLUDED W/S9000 SPRING LOAD KIT	SINGLE	S9012
EYE TO EYE TURNBUCKLES- HEAVY DUTY FORGED INCLUDED W/ALL SUPERTRUSS EXTENSIONS- 9" TO 13"	SINGLE	S9011



OVER 35 YEARS OF INNOVATION, QUALITY, SAFETY.

The latest **2015** part numbers are just a click away! Visit the online automated application guide available **24/7** at **TORKLIFT.COM**

For fast and friendly tech support call us at **1-800-246-8132**